

## Label Verification Interface

To open the Label Verification Interface, double-click on the *CASI UI* icon (Figure 1) located on the desktop.

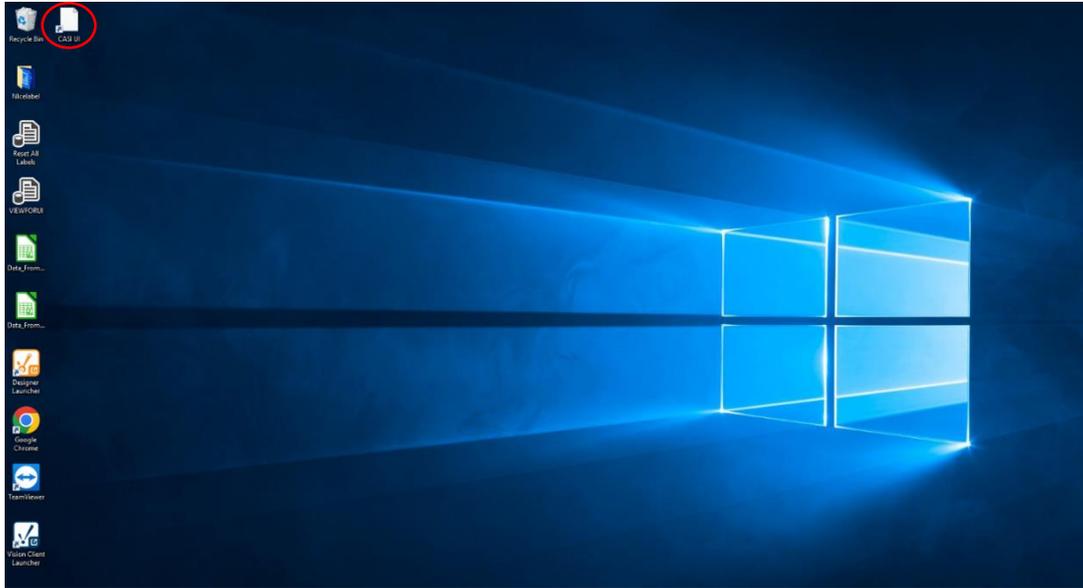


Figure 1: CORE Desktop with CASI UI Indicated

The Label Verification screen (Figure 2) allows the user to send individual or batches of labels to the printer and monitor their status.




Check License



World Class Manufacturing + Cutting Edge Technology

Active Pallet: 500000001233884 Clear Pallet Resend All Labels Clear Search Enter status to filter

Pallet ID	SSCC ID	Label Created Time	Label Requested Time	Status	
500000001233884	00000083460032987336	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987329	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987312	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987305	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987299	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987282	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987275	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987268	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987251	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987244	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987237	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987220	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987213	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label
500000001233884	00000083460032987206	3/9/2023 1:22:30 PM	Apr 24 2023 7:48AM	Sent to Printer	Resend Label

Copyright 2022 by Cornerstone Automation Systems, LLC ("CAS"). All rights reserved. The information contained herein is proprietary, confidential and includes trade secrets of CASI and may not be reproduced in whole or in part or otherwise used without the explicit written permission of CASI.

Figure 2: Label Verification Screen



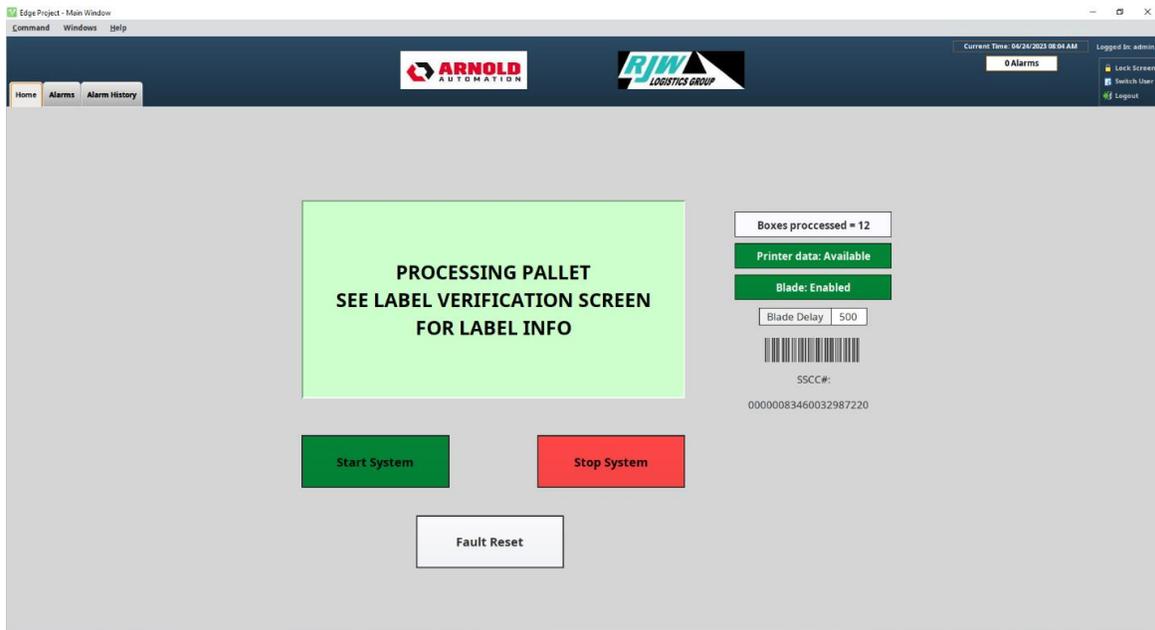


Figure 4: Main System HMI

From here, the operator can start/stop the system, enable/disable the blade, reset faults, and monitor the state of the system. There is also the ability to lock the screen, switch users, and log out.

The main screen has a multistate indicator that updates its message according to the current state of the system to indicate any action required from the operator as shown below.

## HMI Messages

The HMI will provide the operator with messages related to the status of the system and instructions for operation. All messages will be displayed in the center of the HMI, as indicated in Figure 5.

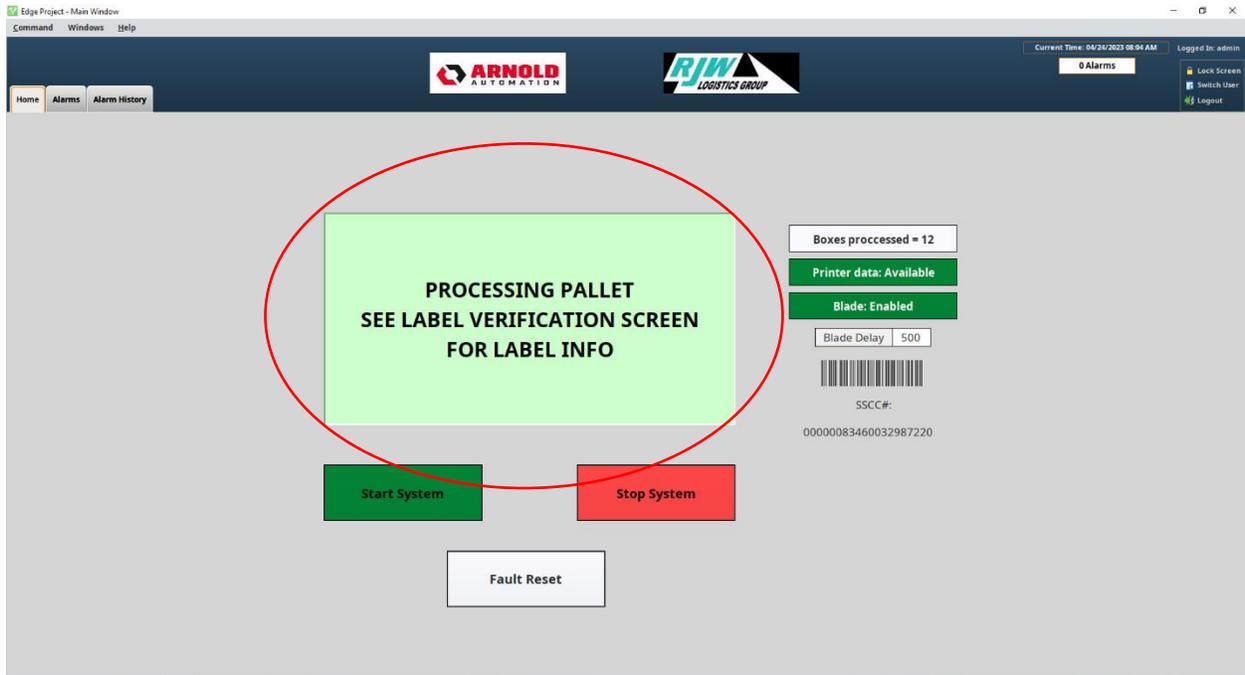



Figure 5: Main HMI Screen with Message Location Indicated

Messages that will be displayed are as follows:

"Press Control Power On" message occurs when starting up the system. Press the green button on the control box.



"Press 'Start System' to Enable Line" is shown when starting up the system. Click start system to enable the line.

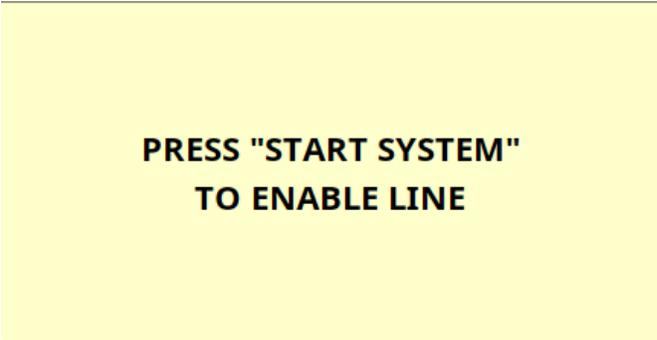

**PRESS "START SYSTEM"  
TO ENABLE LINE**

"Processing Pallet" message is displayed when the system is running normally. For more information on the labels being applied, see the CASI label verification screen.




**PROCESSING PALLET  
SEE LABEL VERIFICATION SCREEN  
FOR LABEL INFO**

"Verify Correct Box Height" message occurs when a box is too large for the system. The box will be stuck behind the frame near the control box.



**VERIFY CORRECT BOX HEIGHT  
BOX CAN NOT BE TALLER THAN 20  
INCHES**

"System Faulted" message is displayed when a fault occurs. See the alarms screen for more details.

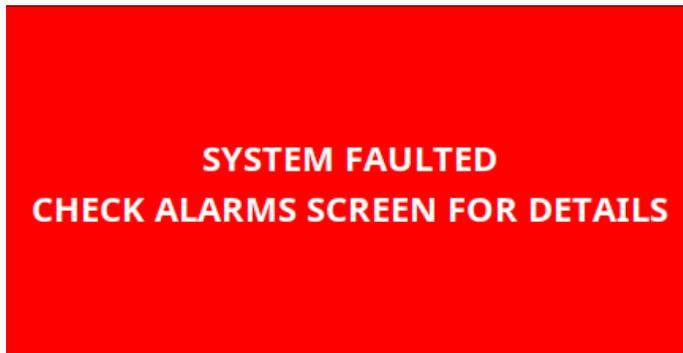

"Alarm Present" message is shown when there is a fault that does not stop the system from running but requires attention from the operator.



There is an Alarms window. Clicking this takes you to the Alarms Tab (Figure 6). This screen will show you any unacknowledged alarms. To clear the screen, select the alarms that have cleared and been addressed and click *Acknowledge* at the bottom of the screen.



Figure 6: Alarms Tab

The Alarm History tab (Figure 7) shows the history of alarms that have occurred in the system.

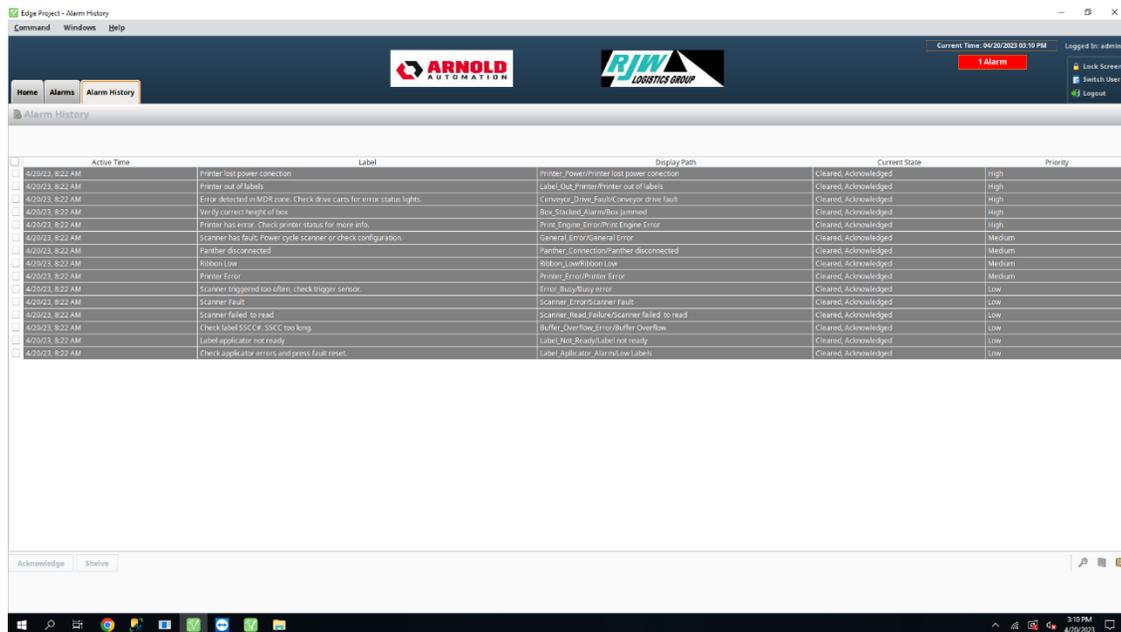


Figure 7: Alarms History Tab